



# CHEMICAL ANCHORS

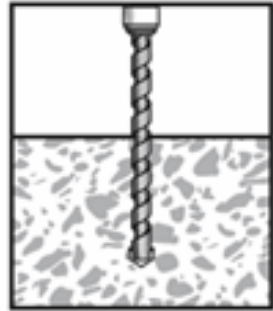


Drill a hole into the base material that suits the diameter and embedment depth of the Chemical stud anchor being used.




Blow out dust and loose materials, brush the hole and blow it out again.

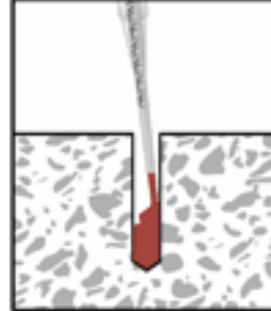

Inject (mixed) adhesive into approx half the hole starting at bottom first into hole to suit type of Stud Anchor being used.

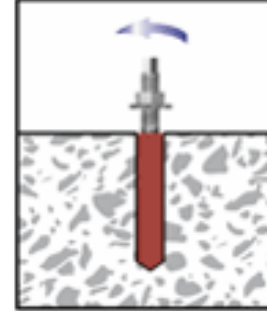

Insert Stud Anchor into hole and rotate by hand (flat-cut) or use hammer drill and drive bit for rotation of (hex-drive) style.

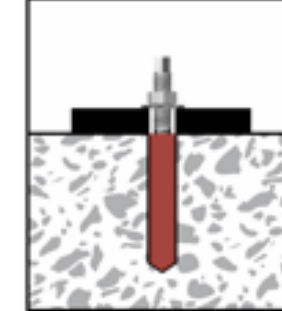

Allow recommended time for curing of adhesive and then apply load. Do not disturb Stud Anchor during curing process.

*For further technical information please contact Southeast Fasteners direct*

Southeast Fastener	ABN 30117890114	
Larapinta Branch:	71 Axis Place, LARAPINTA QLD 4110	TEL: 07 3273 4400   FAX: 07 3272 4999
Eagle Farm Branch:	109A Links Avenue South, EAGLE FARM QLD 4009	TEL: 07 3268 77 88   FAX: 07 3268 5689